

|   |   |   |
|---|---|---|
|    |    |    |
| <p>BOS1124034810<br/>Bosch Rotor</p>  | <p>RTF39718<br/>RECTIFIER (Alt.for RTF 3978A)</p>                                   | <p>BKT40206<br/>Bosch Bracket</p>   |
|   |   |   |
| <p>BRG62032RS<br/>BEARING</p>   | <p>BOS1125884479<br/>Bosch Bracket</p>  | <p>BRG62012RS<br/>BEARING</p>   |
|  |  |  |
| <p>VRG4641<br/>REGULATOR</p>  | <p>SLR3913<br/>SLIP RING O/D 28mm</p>   | <p>ABR5085<br/>Alternator Brush Set</p>   |



**BOSCH - 0120489244**

ALT16013

|  |   |   |
|--|---|---|
|   |  |  |
| <p>EC47822<br/>Bosch Capacitor</p>   | <p>EC41364<br/>Bosch Pulley</p>   | <p>BOS1127011062<br/>Bosch Terminal Kit</p>   |
|  |   |   |
| <p>EC4114<br/>PLASTIC BEARING CAP</p>  |   |   |